



Operation steps:

- (1) Connect the test pump to the system and close the valve V2.
- (2) Fill the system with liquid and bleed the air. Tightly close all openings.
- (3) Pump the liquid in system until testing pressure is reached.
- (4) Close valve V1.
- (5) After testing release the pressure by opening V1 and V2.
- (6) Service Use water resistant grease.